

# biosensis® Human Soluble VCAM-1 (sVCAM-1) ELISA **Kit Protocol**

Catalog No: BEK-2106-1P

For quantitative detection of human soluble sVCAM-1 in cell culture supernatants, cell lysates, serum, and heparin or EDTA treated plasma samples only when used as directed

## **TABLE OF CONTENTS**

I	Materials provided	2
II	Equipment required but not supplied	2
III	Technical hints	
IV	Storage of kit components	3
V	Sample preparation and dilution	
VI	Reagent preparation	
	Assay procedure	
	Calculation of results	
	Typical Standard curve	



#### I. Materials Provided

Kit Components	Unit Size/Volume
Lyophilized recombinant human sVCAM-1 standard	10ng/tube x 2
96 wells plate pre-coated with anti-human sVCAM-1 antibody	1 plate
Sample diluent buffer	30ml x 1
Biotinylated anti- human sVCAM-1 antibody (dilution 1:100)	130μl x 1
Antibody diluent buffer	12ml x 1
Avidin-Biotin-Peroxidase Complex (ABC) (dilution 1:100)	130μl x 1
ABC diluent buffer	12ml x 1
TMB colour developing agent	10ml x 1
TMB stop solution	10ml x 1

WARNING: DO NOT MIX REAGENTS SUCH AS ANTIBODY BUFFERS ETC BETWEEN DIFFERENT ASSAYS IF USING MULTIPLE KITS. USE ONLY THE BUFFERS, STANDARDS & SOLUTIONS INCLUDED FOR YOUR SPECIFIC LOT. MIXING SOLUTIONS FROM DIFFERENT TARGET KITS CAN LEAD TO POOR KIT PERFORMANCE

## II. Equipment Required but Not Supplied

- 1. Wash buffer (0.01M PBS or TBS). See technical hints
- 2. Automated plate washer is desirable
- 3. Multi-channel or repeating pipette.
- 4. Clean tubes and Eppendorf tubes.
- 5. Plate shaker (300-500 rpm)
- 6. Mechanical Vortex.
- 7. Microplate reader with 450nm filter.

#### **III. Technical Hints**

- 1. Spin all kit components to get liquid to the bottom of tubes before use.
- 2. Duplicate well assays are recommended for both standard and sample testing.
- 3. In order to avoid marginal effects of plate incubation due to temperature differences, it is suggested that the ABC and TMB solutions be brought to room temperature (or 37° C if using option protocol) 30 min before use.
- 4. Recommended method for manual plate washing.
  - Emptying of wells on the plate:



Place the plate on the palm of the hand in a position that enables easy flicking movement using the wrist. Holding the plate over a sink, quickly invert the plate, whilst accelerating the arm downward toward the sink. Abruptly stop the downward acceleration to force the liquid from the wells into the sink. When done correctly the technique should prevent liquid from getting on to the fingers or on the outside of the strip wells or plate holder. *Note: Retain the upside down position of the plate to avoid any back flow into the wells. DO NOT LET THE PLATE DRY OUT.* 

- Blotting the plate: Immediately blot the inverted plate by lightly tapping the plate 3-4 times on blotting paper.
- Washing: Forcefully pipette Wash Buffer into each well with a multi-channel pipette. Empty the wells of wash buffer using technique described above. Repeat washing and flicking procedures thrice. Wash plate 0.01M TBS or 0.01M PBS, and each time let washing buffer stay in the wells for 1-2 min before rinsing with more wash buffer as directed above. *Note: Avoid touching the inside surface of the wells with the pipette tips*.

#### Do not let the wells dry out at any time or enzymatic activity will be lost.

5. Preparation of Wash buffer: (not provided in the kit)

Preparation of 0.01M **TBS:** Add 1.2g Tris, 8.5g Nacl;  $450\mu$ l of purified acetic acid or  $700\mu$ l of concentrated hydrochloric acid to 1000ml H<sub>2</sub>O and adjust pH to 7.2-7.6. Finally, adjust the total volume to 1L.

Preparation of 0.01 M **PBS:** Add 8.5g sodium chloride, 1.4g  $Na_2HPO_4$  and 0.2g  $NaH_2PO_4$  to 1000ml distilled water and adjust pH to 7.2-7.6. Finally, adjust the total volume to 1L.

Note: PBS buffers typically work more reliably than TBS buffers in most cases are recommended.

Note: if blank values are over 0.2 the addition of 0.05% Tween-20 to either TBS or PBS wash buffers will usually help lower them as well as overall assay backgrounds and can help improve signal/noise ratios.

#### IV. Storage of Kit Components

This kit may be stored for up to 6 months at 2°C to 8°C from the date of shipment. Standards should be stored at -20°C or -80°C (recommended at -80°C) after reconstitution. Coated strips or reagents may be store for up to 1 month at 2°C to 8°C. Return unused wells to the pack and reseal pack. *Note: the kit can be used within 8 months if the whole kit is stored at -20°C. Avoid repeated freeze-thaw cycles*.



#### V. Sample Preparation and Dilution

- Cell culture supernatant: Remove particulates by centrifugation (10,000 x g 5 min), analyze immediately or aliquot and store at -20°C-80°C. Divide samples into aliquots to prevent multiple freeze thaws; use appropriate protease inhibitor cocktails for best results.
- Cell lysates: Lyse with RIPA or another non-denaturing lysis buffer. The tube liquid needs to be clear before using in the ELISA. Spin at 10,000xG for 5-10 minutes a 4°C; aliquot cleared supernatants or use immediately following dilutions as recommended. RIPA typically requires a minimum dilution of 1:10. Use of proteinase inhibitor cocktail is recommended; check final pH is neutral to 7.5. Analyze immediately or aliquot and store frozen at -20°C-80°C.
- **Serum:** Allow the serum to clot in a serum separator tube (about 30 minutes-4 hours) at room temperature. Centrifuge at approximately 1000 X g for 15 min. Analyze the serum immediately or aliquot and store frozen at -20°C-80°C.
- Plasma: Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 min. at 1500 x g within 30 min. of collection. Assay immediately for divide into aliquots and store at -20°C-80°C.

Note: The user needs to estimate the concentration of the target protein in the sample and select a proper dilution factor so that the diluted target protein concentration falls near the middle of the linear regime in the standard curve. Also with certain growth factors and target proteins, binding proteins and location can influence over all signal. It is recommended that researchers confirm by literature an effective lysis, cell membrane preparations and/or extraction buffer formulations and treatments that are suitable for the precise target being assayed.

The following table can be used as a guideline for sample dilution. Dilute the sample using the provided diluent buffer. Mix the sample thoroughly with diluent buffer.

Target protein concentration	Concentration range	Working dilution	Amount of sample diluent buffer to be added
High target protein concentration	100-1000 ng/ml	1:100	Add 1 µl sample into 99 µl of sample diluent buffer
Medium target protein concentration	10-100 ng/ml	1:10	Add 10 µl sample into 90 µl of sample diluent buffer
Low target protein concentration	156-10,000 pg/ml	1:2	Add 50 µl sample to 50 µl of sample diluent buffer
Very Low target protein concentration	≤156 pg/ml	No dilution necessary	(working dilution is 1:2)

Assay Precision:

	Intra	a-Assay Precis	sion	Inter-Assay Precision			
Sample	1	2	3	1	2	3	
N	16	16	16	24	24	24	
Mean ng/ml	310	1065	5287	304	1029	5603	
Std. Dev.	17.67	51.12	385.95	19.15	65.85	481.85	
CV(%)	5.7	4.8	7.3	6.3	6.4	8.6	

Range: 156 pg/mL-10,000 pg/mL; Sensitivity: < 10 pg/mL: Specificity: VCAM-1



#### VI. Reagent Preparation

#### 1. Preparation of Standards

- Reconstitution of standard with the sample diluent provided.
  - (a) 10,000 pg/ml (10 ng/ml) of human sVCAM-1 standard solution: Add 1ml of sample diluent buffer into *one* tube of standard, mix thoroughly and keep the tube at room temperature for 10 min. The standard used in this kit is recombinant human VCAM-1, ECD, amino acids 25-698, purified from mammalian cell culture.
  - (c) 5000 pg/ml to 156 pg/ml of human sVCAM-1 standard solutions: Label 6 Eppendorf tubes with 5000 pg/ml, 2500 pg/ml, 1250 pg/ml, 625 pg/ml, 312 pg/ml, 156 pg/ml respectively. Aliquot 0.3 ml of sample diluent buffer into each tube. THEN Add 0.3 ml of the above 10000 pg/ml standard solution (item a) into the 1st tube and mix. Transfer 0.3ml from 1<sup>st</sup> tube into 2<sup>nd</sup> and mix. Continue performing serial dilutions.
- Note: Standard solution should be prepared no more than 2 hours prior to the experiment. The working standard solution may be stored at 4°C for up to 12 hours, or at -20°C for up to 48 hours. Avoid repeated freeze-thaw cycles.

## 2. Preparation of Biotinylated antibody working solution

- The total volume should be: 0.1ml/well x (the number of wells). (Allowing 0.1-0.2 ml more than total volume).
- Biotinylated antibody (Reagent B) should be diluted in 1:99 with the antibody diluent buffer and mixed thoroughly.
- Note: the solution should be prepared no more than two hours prior to the experiment.

## 3. Avidin-Biotin-Peroxidase Complex (ABC)

- The total volume should be: 0.1ml/well x (the number of wells). (Allowing 0.1-0.2 ml more than total volume).
- ABC should be diluted in 1:99 with the ABC diluent buffer and mixed thoroughly.
- Note: the solution should be prepared no more than one hour prior to the experiment.



## VII. Assay Procedure

We recommend that standard solution dilutions and each sample are plated in duplicate. Read entire protocol before beginning; if using optional method the ABC working solution and TMB color developing agent must be kept warm at 37°C for 30 min before use.

- 1. Aliquot out the standards into each well of the pre-coated plate. Add 0.1ml of the sample diluent buffer into the control well (Zero well). Add 0.1ml of each properly diluted sample into each empty well. We recommend at least duplicate standards and samples. *Note: See "VII. Sample Preparation and Dilution Guideline" above for details.*
- 2. Seal the plate with parafilm and incubate the plate at 4°C overnight. *Note: we recommend users leave the plate on a shaker if possible.* (Optional method: 37°C, 90 minutes but it is slightly less sensitive)
- 3. Remove the cover, discard the plate contents and blot the plate onto paper towels or other absorbent material. **DO NOT** let the wells completely dry at any time. Wash plate 3-5 times using wash buffer as described in the technical hints. *Note: See "V. Technical Hints Recommended method for manual plate washing" above for details.*
- 4. Add 0.1ml of biotinylated antibody working solution into each well. Cover and incubate the plate at room temperature on a plate shaker for 2-3 hours. (Optional 37°C, 60 minutes with shaking) Wash 3X as described in the technical hints.
- 5. Add 0.1ml of prepared ABC working solution (*Note: See "VIII. Reagent Preparation"* above for details) into each well. Cover and incubate the plate at room temperature on a plate shaker for 1 hour. (Optional 37°C, 30 minutes with shaking). Wash 5X as described in technical hints allowing the wash buffer to remain in the wells for 1-2 minutes.
- 6. Warm TMB to room temperature (37° if using optional protocol). Add 90µl of prepared TMB color developing agent into each well and incubate in the dark for 30-35 minutes at RT (or 15-30 minutes at 37°C). The optimal incubation time must be empirically determined. A guideline to look for is blue shading for the top four standard wells, while the remaining standards remain clear. Stopping the reaction too quickly can lead to low standard curve vales. Note: depending upon the sample dilution the experimental samples may show color much faster, if this is the case repeating the assay at a lower sample dilution is recommended if sample O.Ds are out of range.
- 7. Stop the reaction by adding 0.1ml of prepared TMB stop solution into each well. Mix gently. The color will change into yellow.
- 8. Immediately read the plate at 450nm with a microplate reader. *Note: Color will fade over time; hence, we recommend plate to be read within 30 min after adding the stop solution.*



**CAUTION:** Bubbles in the wells will cause inaccurate readings. Ensure that all bubbles are removed prior to taking the absorbance reading.

#### **VIII. Calculation of Results**

#### (a) Manual Plate Reading:

(The relative  $O.D._{450}$ ) = (the  $O.D._{450}$  of each well) – (the  $O.D._{450}$  of Zero well).

The standard curve can be plotted as the relative O.D.<sub>450</sub> of each standard solution (Y) vs. the respective concentration of the standard solution (X). Known concentrations of the target protein are plotted on the X-axis and the corresponding O.D.<sub>450</sub> on the Y-axis. The standard curve should result in a graph that shows a direct relationship between target protein concentrations and the corresponding O.D.<sub>450</sub>. The greater the concentration of target protein in the sample, the higher the O.D.<sub>450</sub>.

Note: if the samples measured were diluted, multiply the dilution factor to the concentrations from interpolation to obtain the concentration before dilution.

#### **Determine concentration of target protein in unknown sample:**

The target protein concentration of the samples can be interpolated from the standard curve. Draw a horizontal line to intersect with the standard curve. A vertical line dropped from this point intersects the X-axis at the concentration of antibody in the unknown sample.

#### (b) PC Interface Plate Reading

Enter the data into computer program curve fitting software. Existing spreadsheet software can perform a good fit with a linear regression analysis.

Biosensis.com is your antibody and ELISA kit specialist Helping you make sense of your research!

We offer antibodies for research in Apoptosis, Autophagy, Cancer, Development, Diabetes & Obesity, DNA Damage, GPCRs, Growth Factors, Immunology, Matrix Molecules, Neuroscience and Stem Cells.


We have over 150 highly sensitive ELISA kits with a strip format offering the highest level of sensitivity and you only need to use what you need.

Biosensis reagents are available online directly from <u>www.biosensis.com</u>



## IX: Typical Standard Curve (for reference only, not to be used for actual data)

Concentration pg/ml	0.0 pg/ml	156 pg/ml	312 pg/ml	625 pg/ml	1,250 pg/ml	2,500 pg/ml	5,000 pg/ml	10,000 pg/ml
O.D.	0.033	0.157	0.245	0.475	0.844	1.293	1.735	2.365

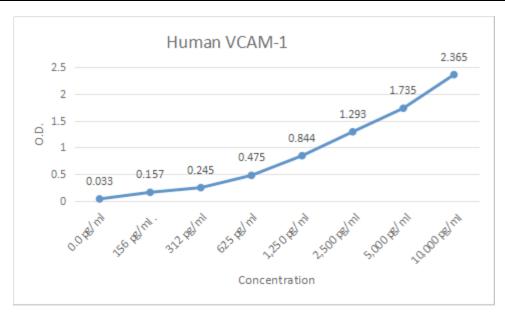

(TMB reaction incubate at 37°C for 20 min)

